

ASSEMBLY INSTRUCTION

NO	DESCRIPTION	SHAPE
1	5654 QUICKFIT HOUSING 1*	47 PCS
	5570 QUICKFIT BOLT 1**	47 PCS
	UNIVERSAL CAP 1***	24 PCS
2	M8 X 25MM WOOD DOWEL	48 PCS
3	M3 X 12MM CHIPBOARD SCREW	16 PCS
4	M4 X 25MM HANDLE CHIPBOARD SCREW	10 PCS
5	M5 X 16 MM STEEL BRACKET	4 PCS
6	U PLASTIC HANDLE 160MM	2 PCS
7	COMPO ADJUST RUNNER 7* 7**	4 SETS
8	5/8" NAIL	34 PCS
9	5/8" PVC NAIL WITH PIN	8 PCS
10	M4 ALLEN KEY	1 PC
11	M6 X 50MM CSK CAP WOOD SCREW	8 PCS

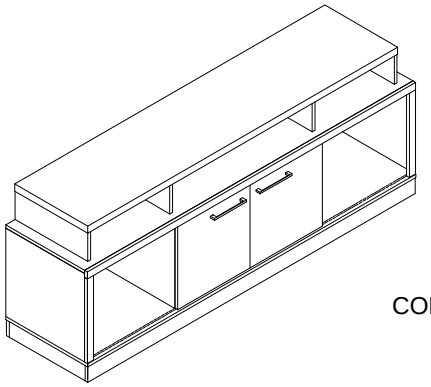


COMPLETED ASSEMBLY


HARDWARE NO.1

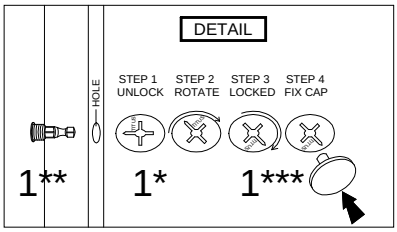


STEP 1

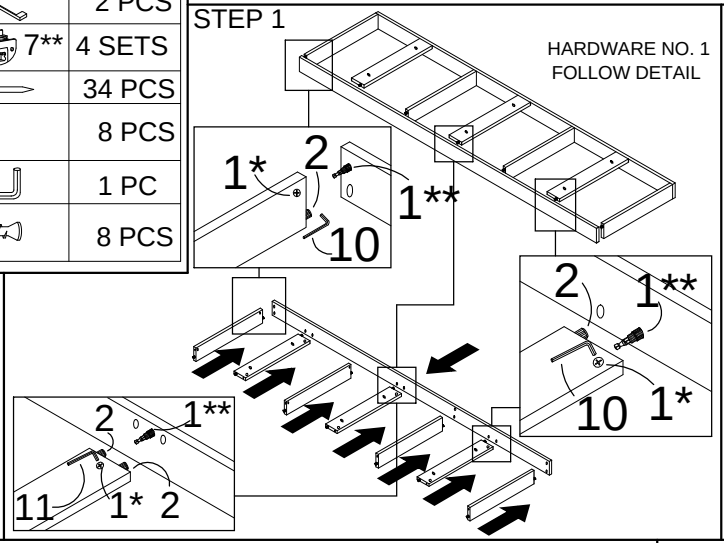


STEP 2

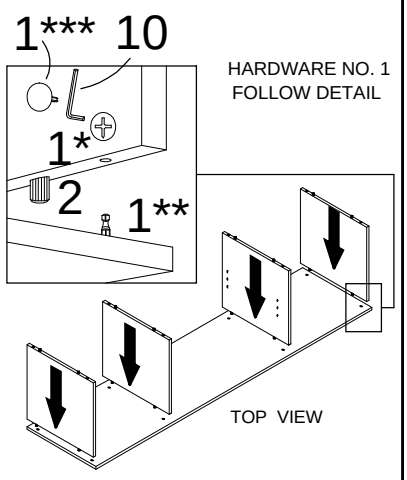


STEP 3

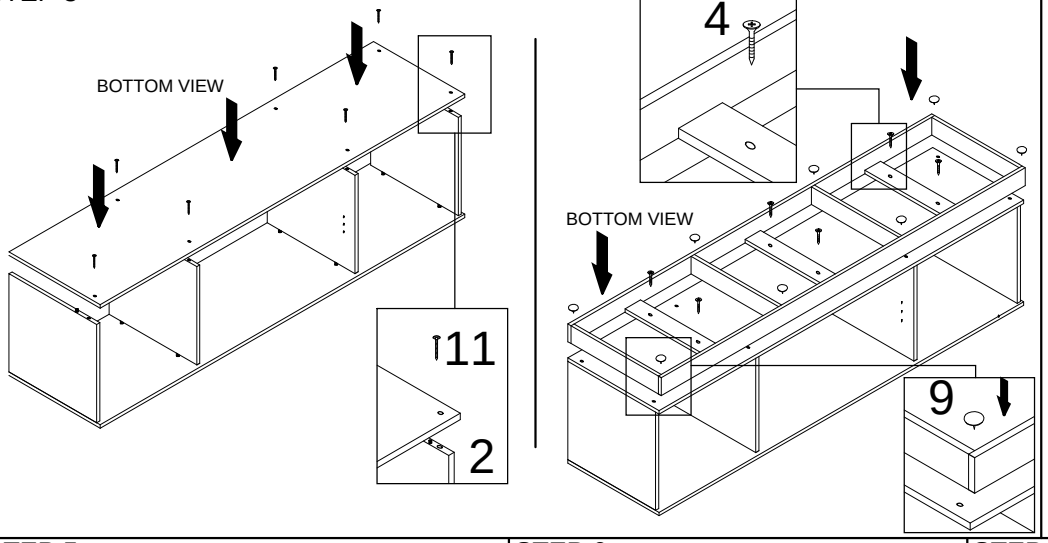


STEP 4

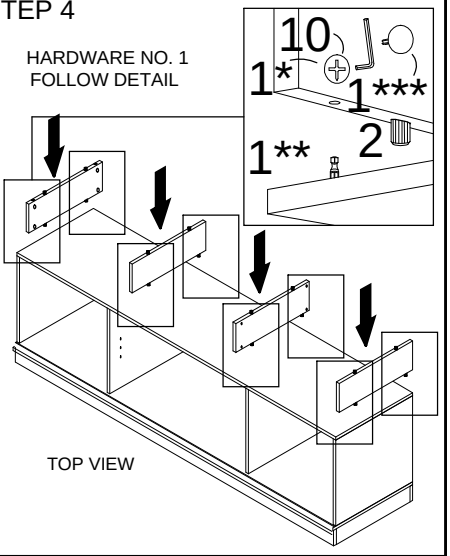

STEP 5

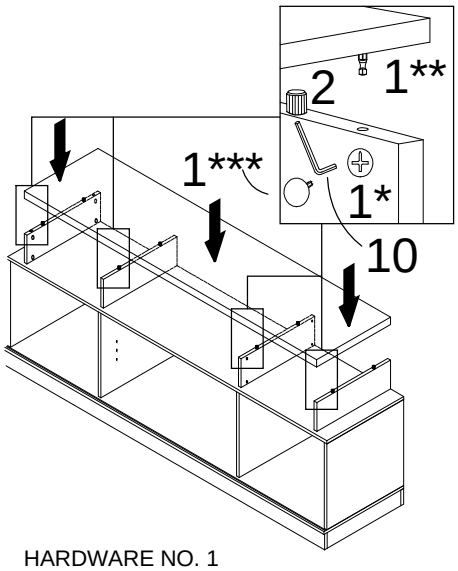

STEP 6

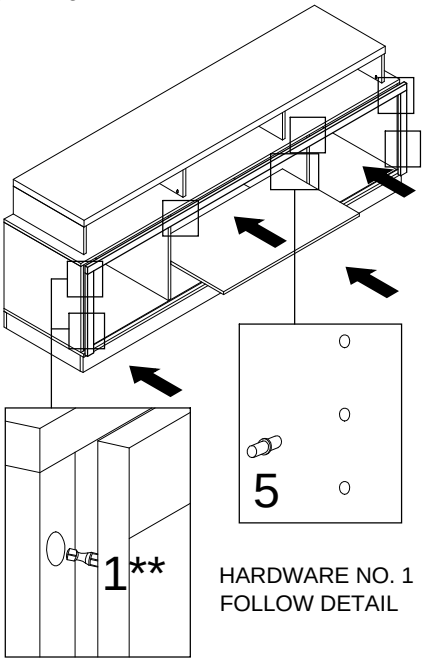

STEP 7

