

ASSEMBLY INSTRUCTION

FLORA


MODEL : (FLORA) SIDE TABLE - 1 DRAWER

Before you begin, please follow Assembly Instruction carefully. Follow them step by step.

STEP 5




(B) M6 X 50MM JCBC
SCREW - 8 PCS

(C) M4 ALLEN KEY - 1 PC

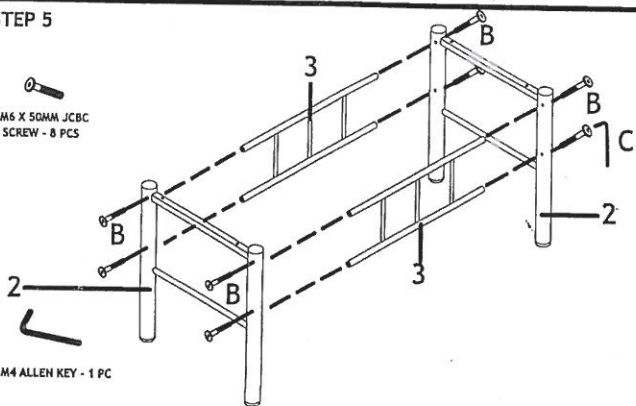

REQUIRED ASSEMBLY TOOLS :
POZI SCREWDRIVER - 1PC

(A) M4 X 32MM CSK
SCREW - 4 PCS

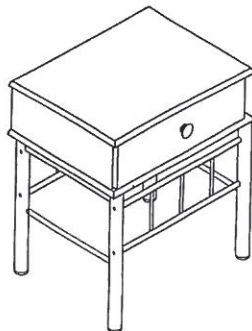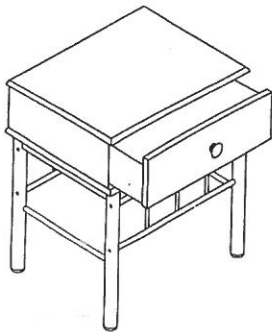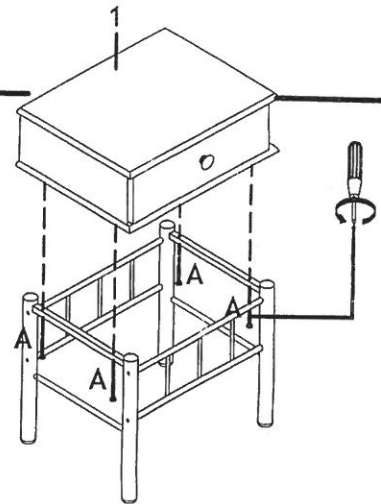

FULL SETUP

HARDWARE LIST

(A) M4 X 32MM CSK SCREW - 4 PCS

(B) M6 X 50MM JCBC SCREW - 8 PCS

(C) M4 ALLEN KEY - 1 PC

PART LIST

(1)

TABLE WITH DRAWER X 1 PC

(2)

TABLE LEGS LEFT & RIGHT X 2 PCS

(3)

PART A X 2 PCS